YAMAHA RHINO PLOW MOUNT

Plow Mount

PART # 105265

Hardware Kit: HK-122

Kit Components:

Qty.	Part Description
1	. Plow Mount Plate
2	. Spacer Plate
2	. Bolt Plate
4	. 3/8"-16 x 3 1/2" Bolt
2	. 3/8"-16 x 1 1/4" Bolt
4	. 3/8" Lock Washer
2	. 3/8" Flanged Lock Nuts
1	. 12" Soft Loop Strap


INSTALLATION INSTRUCTIONS:


- 1. Place mount plate on machine as shown in Figure 2.
- 2. While holding mount plate up to machine loosely install bolt plates (A) using 3 1/2" bolts and lock washers as shown in Figure 3.
- 3. If installing a winch mount or 2" receiver do so now. If not skip to Step 4.


Note:


If installing a winch mount or 2" receiver refer to the mount specific installation manual. Use spacers (B) provided when installing winch mount and 2" receiver as shown in Figure 4.


- 4. Install 1 1/4" bolts (C) using flanged lock nuts as shown in Figure 5.
- 5. Tighten down all bolts.
- 6. See UTV Plow Tube System instruction manual for tube attachment.

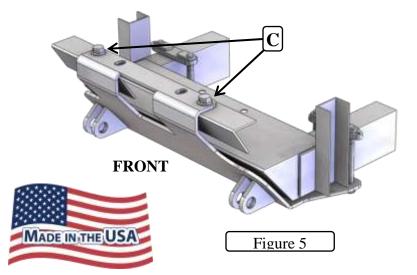

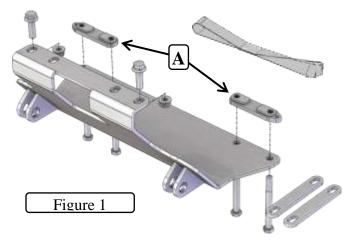

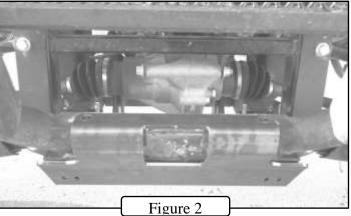

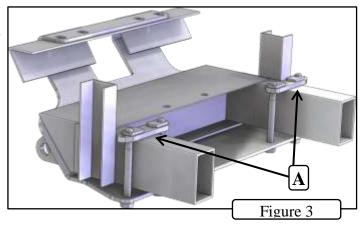

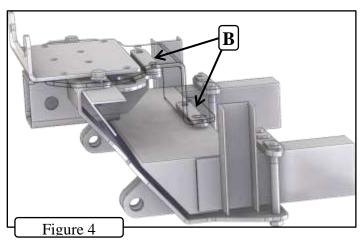




THIS MOUNT RECOMMENDS A PLOW PULLEY

SYNTHETIC ROPE PLOW FAIRLEAD PULLEY

- ALUMINUM ROLLER
- STANDARD OR WIDE



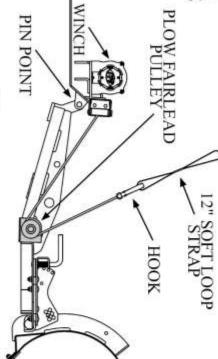


STEEL CABLE PLOW FAIRLEAD PULLEY 2

- RECOMMEND A PULLEY AT THE WINCH AS WELL AS PUSH TUBE VIEW EXAMPLE BELOW

12" SOFT LOOP STRAP

- STEEL ROLLER
- STANDARD OR WIDE



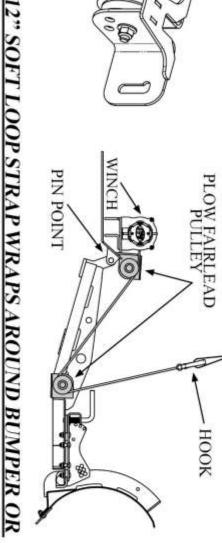

SOLID ANCHOR POINT ABOVE PULLEY

WHYUSEAPULLEY?

MORE VERTICAL LIFTING POSITION, THIS IT CREATES A SHALLOW LIFTING ANGLE WHEN THE WINCH FAIRLEAD AND PLOW PIN POINT ARE CLOSE TO EACH OTHER, WILL PROVIDE LESS STRAIN ON THE WINCH AND ENTIRE PLOW SYSTEM CHANGING THE WINCH ANGLE TO A BY ADDING A PULLEY, YOU ARE

POSSIBLE POSITIONS

STANDARD FAIRLEAD PULLEY REQUIRED FOR ALL PUSH TUBE APPLICATIONS

