

# **Gen6 Polaris Sportsman**

## **Winch Mount**

**PART # 100140**




- GENERATION 6 POLARIS SPORTSMANS INCLUDE:
  - “2004” & “2004-1/2” SPORTSMAN 400/500/600/700/700EFI
- THIS MOUNT IS DESIGNED FOR THE FOLLOWING WINCHES:
  - MILE MARKER PE 2500
  - VENOM 2000/2500/3000 Hardcore Series
  - GORILLA 2000 / 2500 / 3000 (grey only Warn look-alike)
  - PROLINE PARTS (grey Warn look-alike only)
  - **MUST HAVE** a 4-hole bolt pattern of 4.875” x 3.00”



(A)

(B)

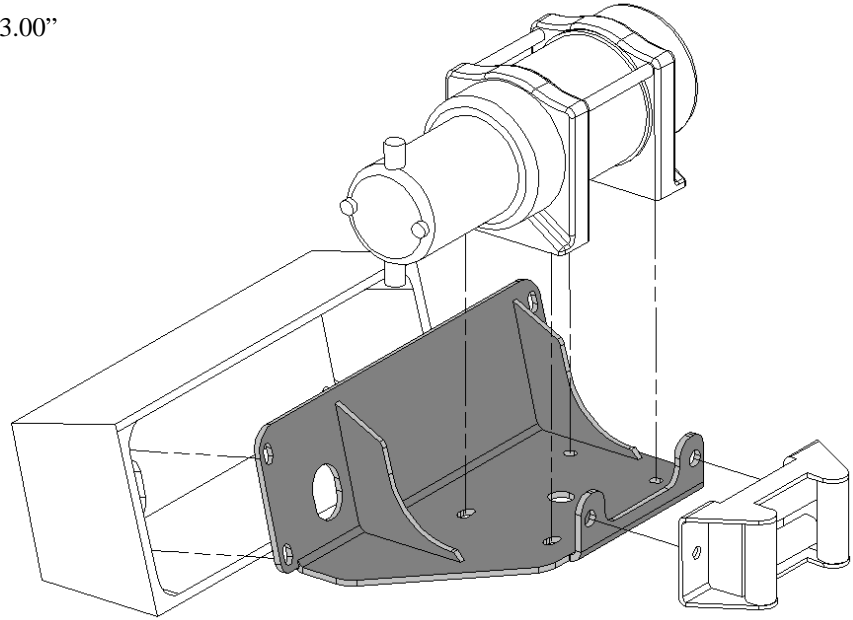

## **INSTRUCTIONS :**

1. **Remove front plastic cosmetic panel ( A ) (panel below the light pod)**
  - This panel is snapped-in with metal and plastic tabs
2. **Remove winch pocket filler panel ( B )**
3. **Attach the Winch and the Hawse or roller fairlead (not included) to the mount using the hardware provided with your winch kit or fairlead.**
4. **Remove the four bolts that hold the front plastic bumper on ( C ) (this hardware will be reused)**
5. **Leave bumper in original position and put the “mount and winch assembly” into the winch pocket and re-assemble the four bolts and hardware.**
  - Tighten bolts in an “X” pattern. (example: top left then bottom right, top right then bottom left)
  - Feed your wire through the wiring holes before fastening for ease of assembly.
6. **Using the instructions provided with your winch, wire accordingly.**

Extra optional Tips:

Use your battery wires (short wires) for the winch and the winch wires (long wires) for the battery. This will allow you to mount the solenoid assembly to the flat metal area that you will see after you remove the plastic cosmetic panel from above. This will help keep your solenoid assembly out of harms way.

