

# CAN-AM QUEST/ TRAXTER/ JD 500/650 BUCK

## PLOW MOUNT

Plow Mount

PART # 105195

Hardware Kit: HK-163

Kit Components:

Item #	Qty.	Description
1	1	Drivers Side Mount Bracket
2	1	Passengers Side Mount Bracket
3	2	Attaching Bracket Strap
4	2	M8-1.25 X 25mm
5	6	M8-1.25 X 30mm
6	18	M8 Flat Washer
7	4	M8 Lock washer
8	2	M8 Nylock Nut

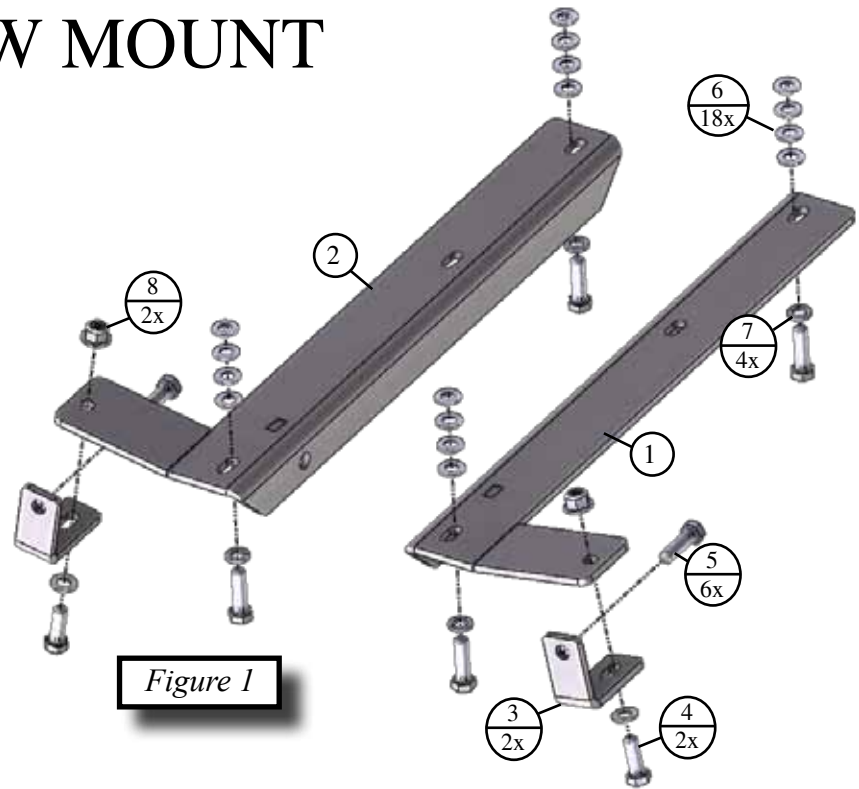


Figure 1

### INSTALLATION INSTRUCTIONS:

*Note: Make sure all of the hardware needed to complete this mount are in the package. Read through and understand the instructions before installing.*

1. Locate and remove the outside bolt from the front of each of the footpad tubes shown in Figure 2. Retain original bolts for use when attaching brackets are removed. The metric nuts will be reused on the longer M8 x 30mm bolts which replaced the original bolts.
2. There are Four M8 x 25mm bolts under the ATV that hold the skidpan in place shown in Figure 3 & 4 Location (A). Retain these for use when attaching brackets are removed. These will be replaced one at a time with M8 x 30mm bolts #5 and lockwashers #7 and used to attach the right and left attaching brackets. First, remove the passenger front M8 x 25mm bolt. Insert the front M8 x 30mm bolt #5 on the passenger side bracket (make sure the Four flatwashers #6 stay in place, as they are used as spacers and must fit up into the recessed area of the skid pan). Turn it about 3 or 4 threads so the attaching bracket can be easily moved and rotated shown in Figure 4 Location (A).



Figure 2

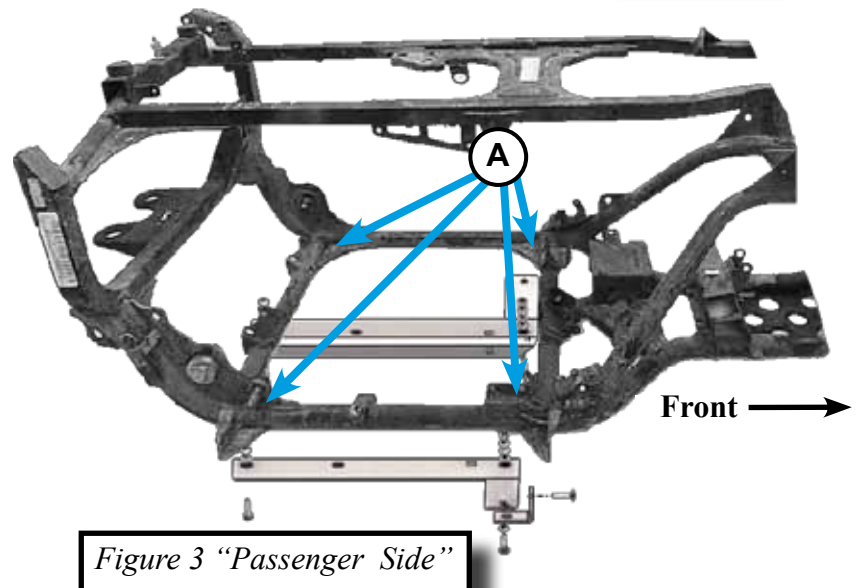


Figure 3 "Passenger Side"

3. Now remove the **rear** M8 x 25mm bolt from the passenger side of the ATV and insert the rear M8 x 30 mm **#5** bolt into the rear of the Left attaching bracket. At this time, you should be able to align the hole in the attaching bracket strap with the hole for the bolt removed in “step 1” and attach with the supplied M8 x 30mm bolt **#5** shown in Figure 5 Location (B). It will probably be necessary to loosen the M8 x 25mm bolt **#4** and nylock nut **#8** that attaches the attaching bracket strap **#3** to the passenger side bracket shown in Figure 5 Location (C).

4. Tighten all hardware down evenly at this time.

5. Repeat steps 1 - 4 the same on the Drivers side of the ATV.

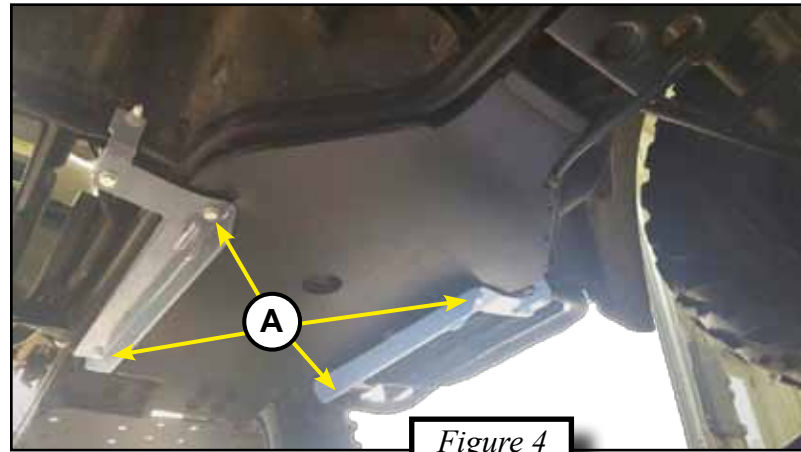


Figure 4

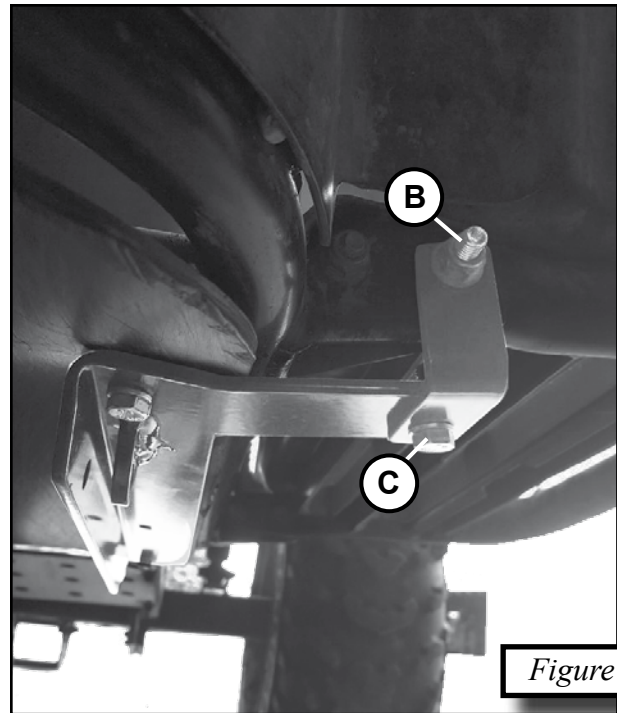


Figure 5

