

POLARIS ACE PLOW MOUNT

Plow Mount

Part: # 105630

Hardware Kit: HK-157

Kit Components:

Qty.	Part Description
1.....	Plow Mount Plate
1.....	Weldnut Strap Bracket
1.....	Weldnut Strap Spacer
2.....	5/16"-18 x 1-5/8" x 2-3/16" x 1" U Bolt
4.....	5/16" Nylock Flanged Nut
2.....	3/8"-16 x 1" Hex Bolt



Figure 1

INSTALLATION INSTRUCTIONS:

1. Place U-bolts (A) on machine frame shown in **Figure 2**. (both sides)
2. Place weldnut strap bracket (B) into frame pocket as shown in **Figure 3**.

Note: depending on clearance, spacer provided in kit may need to be used in between frame and mount.

3. Install mount plate loosely to frame using the hardware provided in kit as shown in **Figure 4**.
4. Adjust so plate is centered on machine.
5. Tighten all nuts and bolts. (make sure u bolt ends are even).
6. See ATV plow tube system instruction manual for tube attachment.

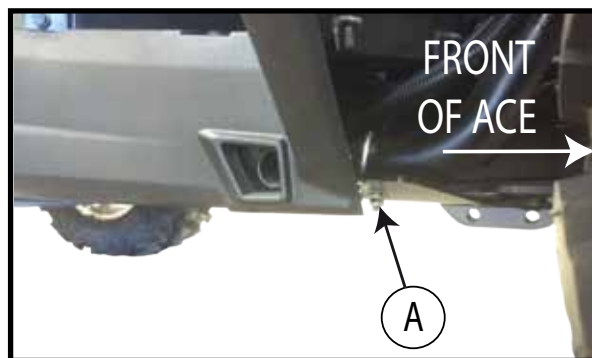


Figure 2: Passenger side View

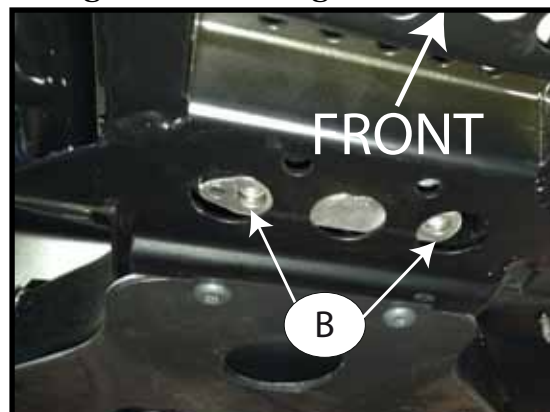


Figure 3



Figure 4

