

RUBICON 500

PLOW MOUNT

Plow Mount

PART # 105215

Hardware Kit: HK-111

Kit Components:

Item #	Qty.	Description
1	1	Plow Mount Plate
2	4	5/16"-18 X 1-1/4" X 2" U-Bolt
3	8	5/16" Flanged Locknut

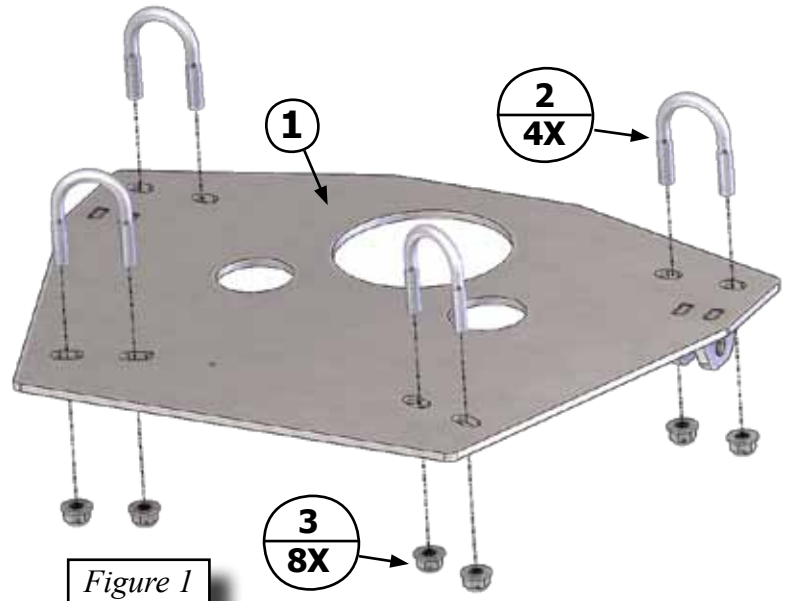


Figure 1

INSTALLATION INSTRUCTIONS:

1. Remove the front half of the stock skid plate.
2. Reattach the bolts that go through the rear half of the front skid plate.
3. Hang the U-Bolts over the frame tubing approximately as shown in Figure 2.
4. Loosely attach the Lock nuts to the U-Bolts. Align the mount to the oem oil filter, using the oil drain hole in the middle.
5. Tighten all hardware evenly.

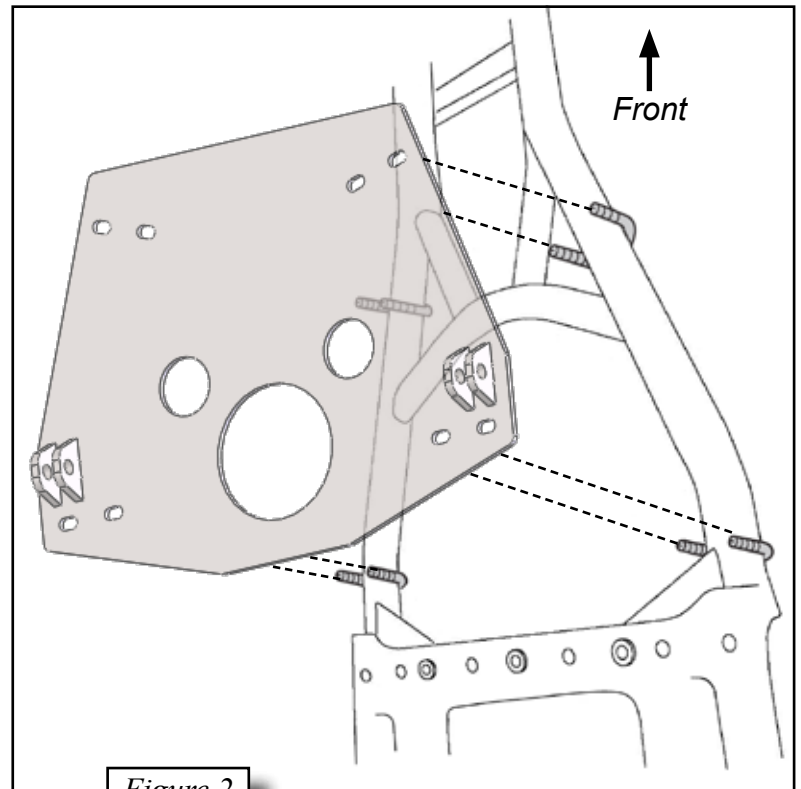


Figure 2

